

French Doors: Door opens **IN**, install on the **OUTSIDE** door frame. Door opens **OUT**, install on the **INSIDE** door frame.

Patio Doors: Install on the **OUTSIDE** door frame.

Step 1: Clean the Installation Surface



What to Do:

- Thoroughly clean the door frame using **hot soapy water** or isopropyl (rubbing) alcohol.
- This removes dirt, grease, and debris, ensuring a strong adhesive bond.

Why? A clean surface prevents the Velcro from peeling off over time.

Step 2: Mark the Center of the Opening Door




What to Do:

- Measure and find the center of the **top of your door frame above the door that opens** and mark it with a pencil.
- The **screen is reversible** for left/right installs.

Why? This ensures accurate alignment of the screen.


Step 3: Prepare the Screen and Velcro

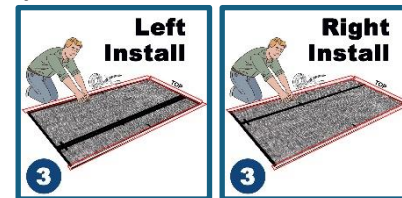

What to Do:

- Lay your **Sentry Screens™** mesh flat on the floor.
- If your **left door opens**, lay the screen so that the screen **opening is on the right**.
- If your **right door opens**, lay the screen so that the screen **opening is on the left**.
- Cut the **hard Velcro** and attach it to the screen's top and sides.

Step 4: "Hem" the Screen?

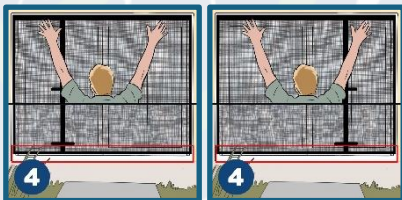


What to Do:

- Hold the screen up to the **top of your door frame**.
- Ensure the bottom hangs approximately $\frac{1}{8}$ to $\frac{1}{4}$ inch above the ground.

Why? If the screen touches or drags on the floor, you may need to "hem" it at the top. For detailed instructions, visit www.sentryscreens.com/installation-tips.


Step 5: Attach the Top Velcro to the Door Frame

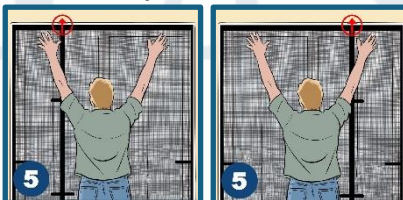

Top Velcro First:

- Remove the white backing tape from the **top Velcro**.
- Align the screen's top opening** with your door frame's mark, making sure it hangs $\frac{1}{8}$ to $\frac{1}{4}$ inch off the ground.
- Press firmly for **30 seconds** to ensure adhesion.
- Attach the top corners. Position them **1-2 cm below** the screen opening height. Press each corner firmly for **30 seconds**.

Step 6: Attach the Side Velcro to the Door Frame

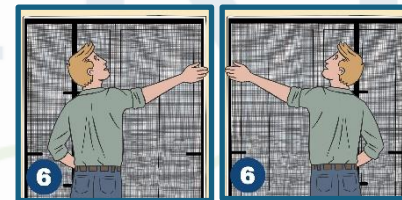

Then the Sides:

- Remove the backing from **one-foot sections** as you move down the frame.
- Press firmly for **30 seconds** per section.
- Avoid stretching the screen too tightly**—this ensures the magnets align and close properly.

Pro Tip: For wooden door frames, use a hammer to gently tap in the provided tacks through the Velcro for extra stability.

Is Your Magnetic Screen Too Long or Too Wide?

Save time and avoid the hassle of returning your screen! You can easily adjust it to make it shorter or narrower to fit your door perfectly.



Visit our customer portal for detailed instructions and helpful videos on customizing and installing your magnetic screen:

www.SentryScreens.com/installation-tips/

If you need assistance with installation or encounter any issues with your screen, don't hesitate to contact our customer support team directly!

Explore our full range of screens at



www.SentryScreens.com

Email: support@sentryscreens.com