

**NOTE:** If your door opens **IN**, install the screen on the **OUTSIDE** door frame.  
If your door opens **OUT**, install the screen on the **INSIDE** door frame.

## Step 1: Clean the Installation Surface



### What to Do:

- Thoroughly clean the door frame using **hot soapy water** or **isopropyl (rubbing) alcohol**.
- This removes dirt, grease, and debris, ensuring a strong adhesive bond.

**? Why?** A clean surface prevents the Velcro from peeling off over time.

## Step 2: Measure and Mark the Door Frame




### What to Do:

- Measure the **top** and **bottom** doorframe widths. Mark the centers with a pencil.
- Measure from the underside of the **top doorframe** to the ground.

**? Why?** This ensures accurate alignment of the screen.

## Step 3: Cut and Insert the Magnets

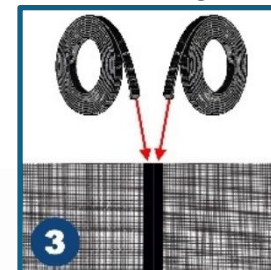

### What to Do:

- Cut the magnets to match the **measured height** of the doorframe.
- Before inserting**, check the magnet polarity so that the two sides **attract**, not repel.
- Insert the cut magnets** into the pockets in the top of **each side** of the screen.


## Step 4: Attach Plastic Clip and Velcro



### What to Do:

- Peel and stick the plastic clip to the **top center mark**. Press firmly for **30 seconds**.
- Cut and stick the **hard Velcro** along the **top and sides** of the doorframe. Press firmly for **30 seconds**.
- Attach Velcro on **either side** of the plastic clip. Do **not** put Velcro over the clip.

## Step 5: Attach the Mesh to the Velcro

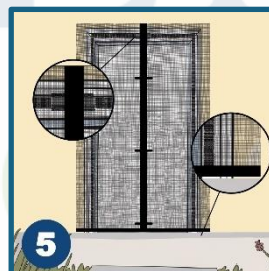

### What to Do:

- Press the **top of the mesh** onto the **Velcro**, ensuring the bottom hangs freely  $\frac{1}{8}$  to  $\frac{1}{4}$  inch off the ground. Excess will be cut off later.
- Align the bottom middle** of the screen with the **ground mark from Step 2**.
- Press the mesh firmly so the **Velcro fibers grip through the mesh holes**.

## Step 6: Secure and Trim Excess Mesh



### What to Do:

- Attach the **soft Velcro** over the hard Velcro, **sandwiching** the mesh in between.
- Press firmly to secure.
- Trim excess mesh** from the **top and sides** with scissors or utility blade.
- Close the **plastic clip** on the mesh.

**Pro Tip:** For wooden door frames, use a hammer to gently tap in the provided tacks through the Velcro for extra stability.

# Is Your Magnetic Screen Too Long or Too Wide?

Save time and avoid the hassle of returning your screen! You can easily adjust it to make it shorter or narrower to fit your door perfectly.



Visit our customer portal for detailed instructions and helpful videos on customizing and installing your magnetic screen:

[www.SentryScreens.com/installation-tips/](http://www.SentryScreens.com/installation-tips/)

If you need assistance with installation or encounter any issues with your screen, don't hesitate to contact our customer support team directly!

Explore our full range of screens at



[www.SentryScreens.com](http://www.SentryScreens.com)

Email: [support@sentryscreens.com](mailto:support@sentryscreens.com)