

NOTE: Install the screen on the **INSIDE** door frame so the ramp can open out.

Step 1: Clean the Installation Surface



What to Do:

- 1.1. Thoroughly clean the door frame using **hot soapy water** or **isopropyl (rubbing) alcohol** where the Velcro will be attached.



Why? This removes dirt, grease, and debris, ensuring a strong adhesive bond. A clean surface prevents the Velcro from peeling off over time.

Step 2: Measure and Mark the Door Frame



What to Do:

- 2.1. Measure the **top** and **bottom** doorframe widths. Mark the centers with a pencil.
- 2.2. **Mark two evenly spaced points** between the **plastic clip** and the **outer edge** of the door frame on both sides. This is to position the straps.



Why? This ensures accurate alignment of the screen and straps.


Step 3: Attach Plastic Clip & Cut Velcro



What to Do:

- 3.1. Peel & stick plastic clip over the **top center mark** (2.1). Press firmly for **30 seconds**.
- 3.2. **Cut two Velcro strips**, each long enough to reach from the **plastic clip** to the **outer edge** of the door frame.
 - a. Do **NOT** attach the Velcro yet.
 - b. Do **NOT** put Velcro over the clip.

Step 4: Attach Retraction Straps and Hard Velcro

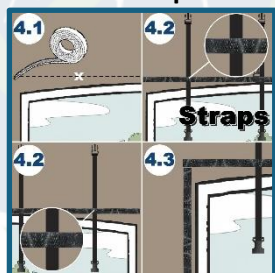

What to Do:

- 4.1. **Starting top-left**, peel and stick the **hard Velcro** **along the top** of the doorframe.
- 4.2. As you apply the Velcro, **align the middle of each strap** with its mark (2.2) and attach the **Velcro over the strap** to secure it in place.
 - a. Attach Velcro on **either side** of the plastic clip.
- 4.3. Cut and stick the **hard Velcro** along **both sides** of the doorframe. Press firmly for **30 seconds**.


Step 5: Attach the Mesh to the Velcro



What to Do:

- 5.1. Press the **top of the mesh** onto the **Velcro**, ensuring the bottom **hangs freely 1/8 to 1/4 inch** off the ground. Excess (top & sides) will be cut off later.
- 5.2. **Align the bottom middle** of the screen with the **ground mark from Step 2.1**.
- 5.3. Press the mesh firmly so the **Velcro fibers grip through the mesh holes**.

Step 6: Secure and Trim Excess Mesh

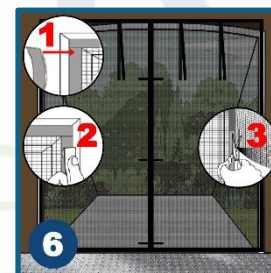

What to Do:

- 6.1. Attach the **soft Velcro** over the hard Velcro, **sandwiching** the mesh in between.
- 6.2. Press firmly to secure.
- 6.3. **Trim excess mesh** from the **top and sides** with scissors or utility blade.
- 6.4. Close the **plastic clip** on the mesh.



Pro Tip: For wooden door frames, use a hammer to gently tap in the provided tacks through the Velcro for extra stability.

Is Your Magnetic Screen Too Long or Too Wide?

Save time and avoid the hassle of returning your screen! You can easily adjust it to make it shorter or narrower to fit your door perfectly.



Visit our customer portal for detailed instructions and helpful videos on customizing and installing your magnetic screen:

www.SentryScreens.com/installation-tips/

If you need assistance with installation or encounter any issues with your screen, don't hesitate to contact our customer support team directly!

Explore our full range of screens at



www.SentryScreens.com

Email: support@sentryscreens.com